
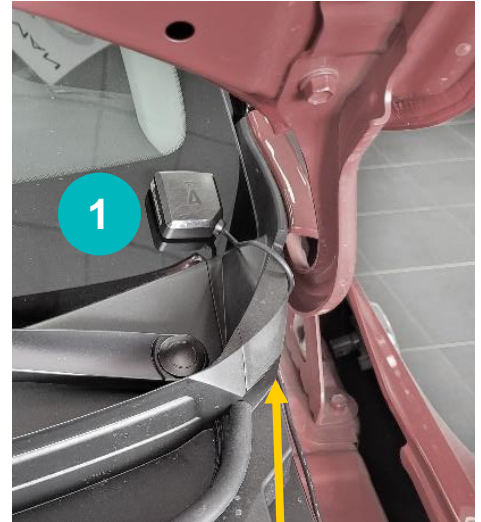
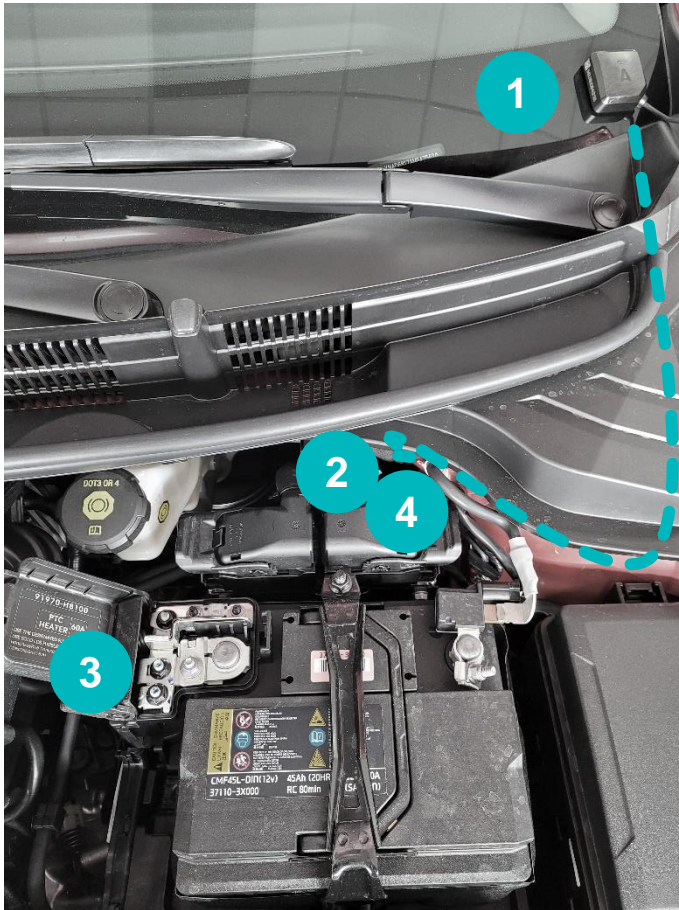






Kia Stonic 2017-

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



Make sure that the cable goes under the soft material.

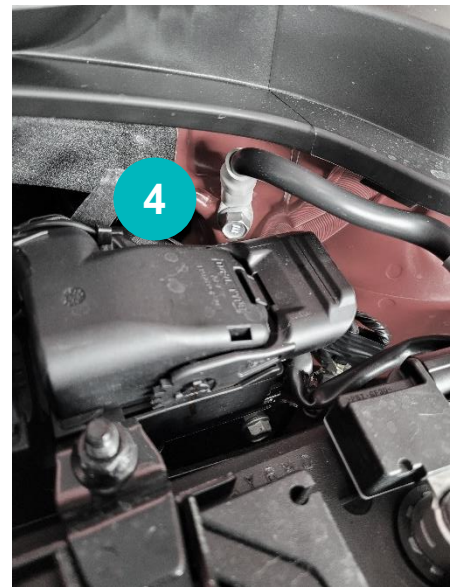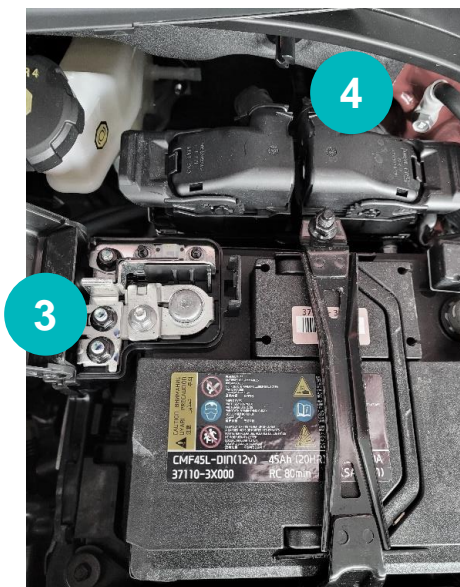

Remarks: