



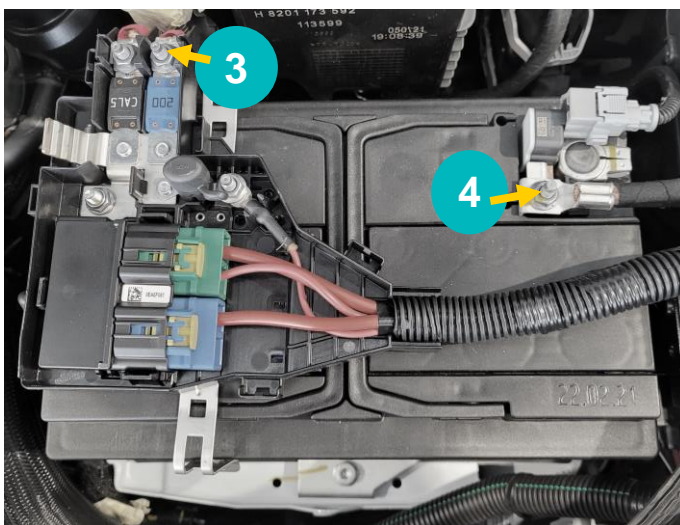

Renault Express Van 2021-

- 1 Location Triplog
 - 2 Surplus Cable
 - 3 +12V connection (red)
 - 4 Ground connection (black)
- Cable Routing

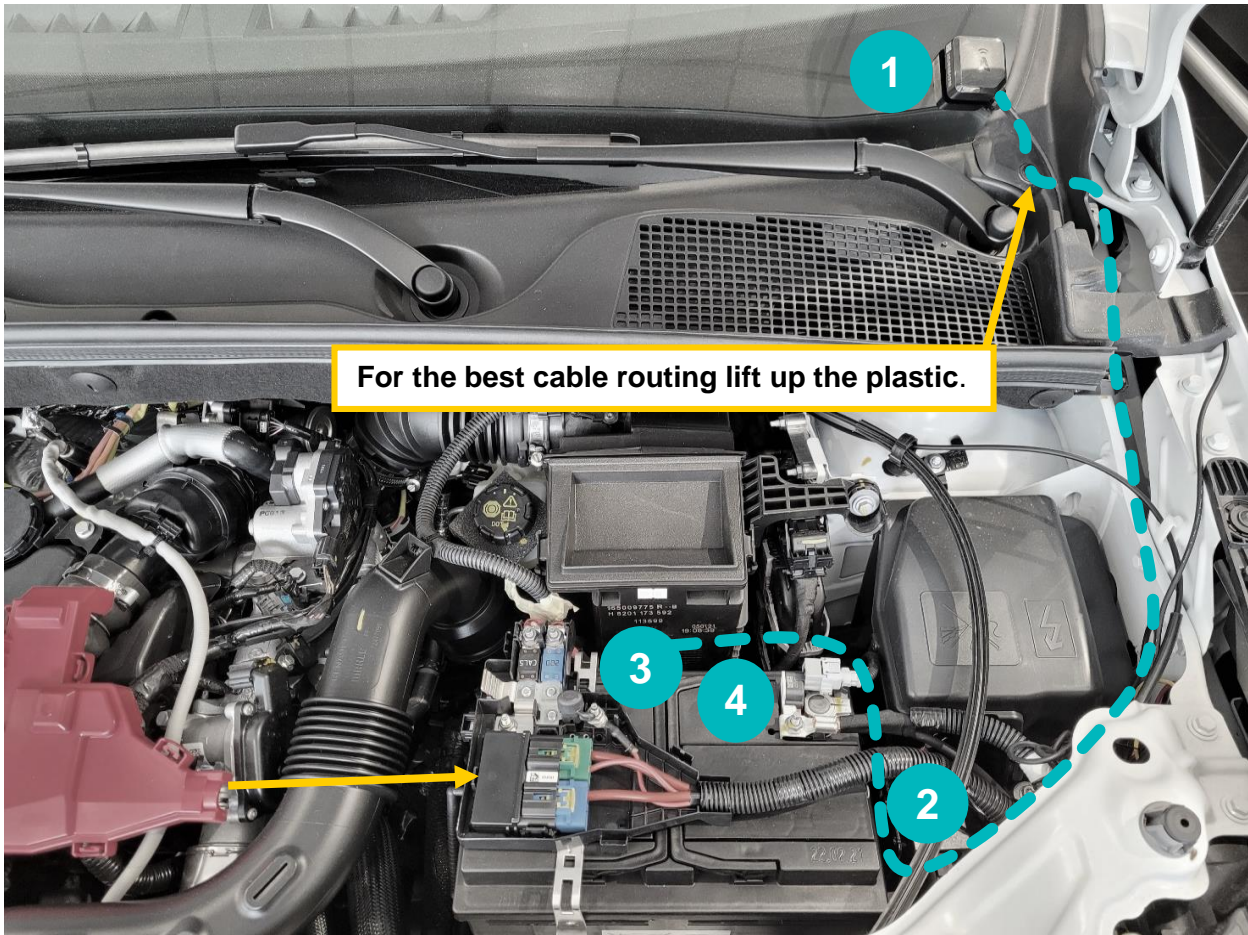

Remarks: To access the +12V connection, remove the plastic red cover. Make sure that the plastic cover is put back correctly.