
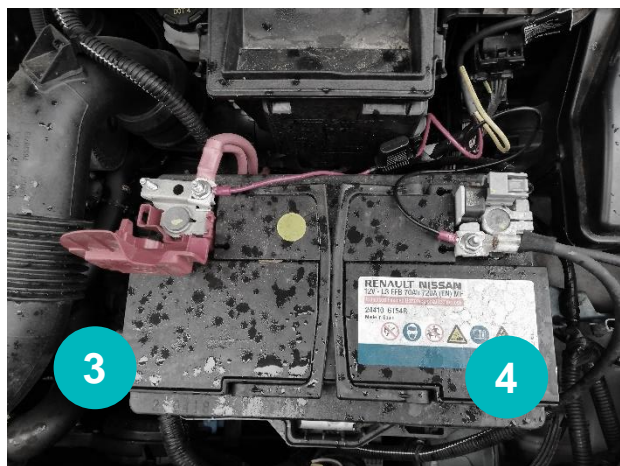
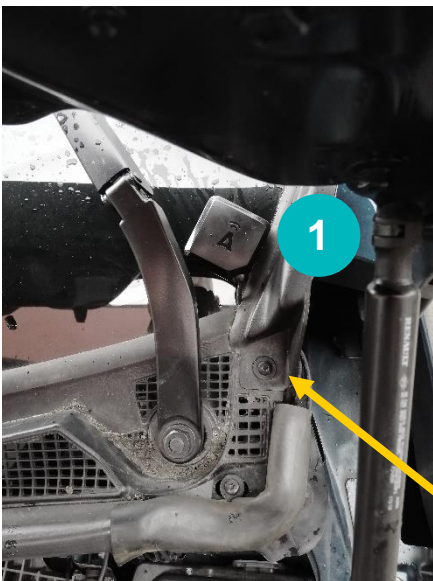
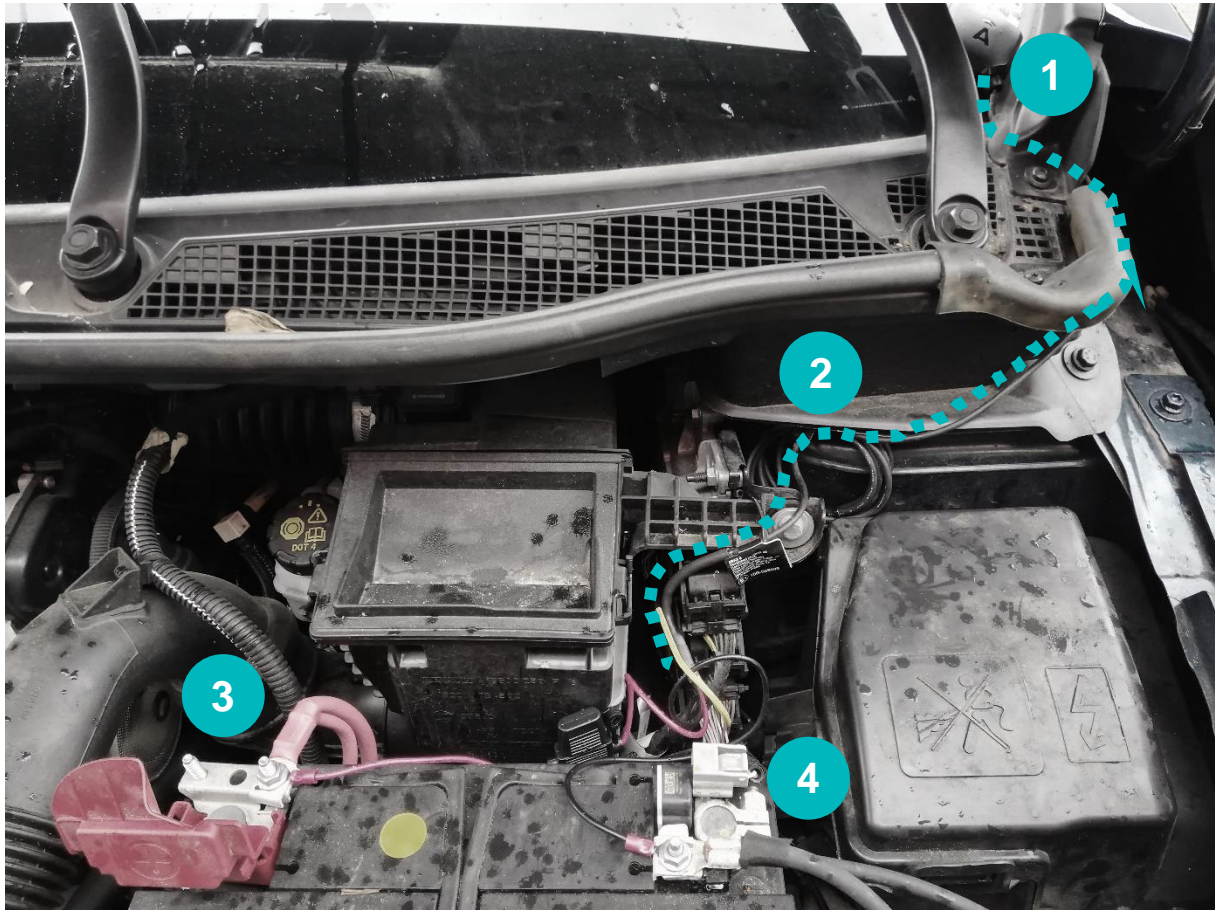




Renault Captur 2013-2019

- 1 Location Triplog
- 2 Surplus Cable
- 3 +12V connection (red)
- 4 Ground connection (black)
-  Cable Routing



For the best cable routing remove the screw, and put it back

Remarks: