



Mercedes-Benz Sprinter 2020-



- 1 Location Triplog
 - 2 Surplus Cable
 - 3 +12V connection (red)
 - 4 Ground connection (black)
- Cable Routing



For the best cable routing remove the plastic cover



To access the positive and negative connection, lift up the floor cover, and remove the tool holder. Make sure that the everything cover is put back correctly

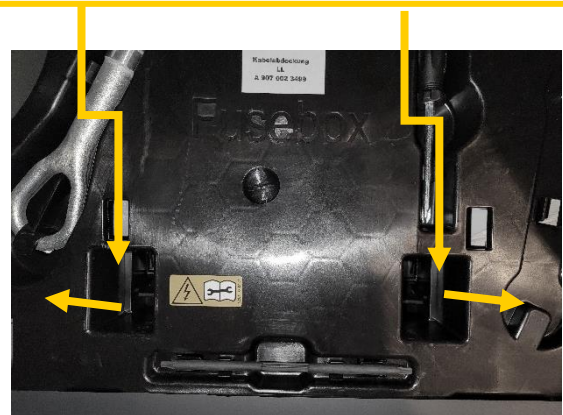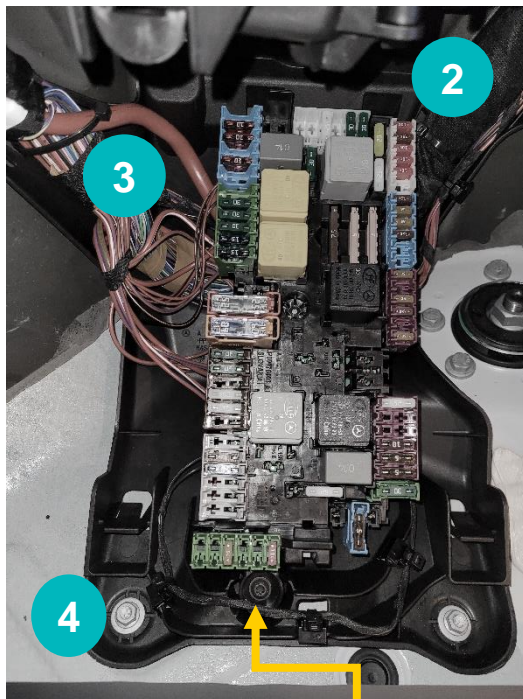

To access the positive connection lift up the fuse box, by loosening the screw.

Remarks: Skill level 3/5. Tools needed: Plastic spatula, Torx 20 screwdriver, socket wrench 10 and 13mm